


# Enviro-Tub 7 Foot Stand Assembly Instructions






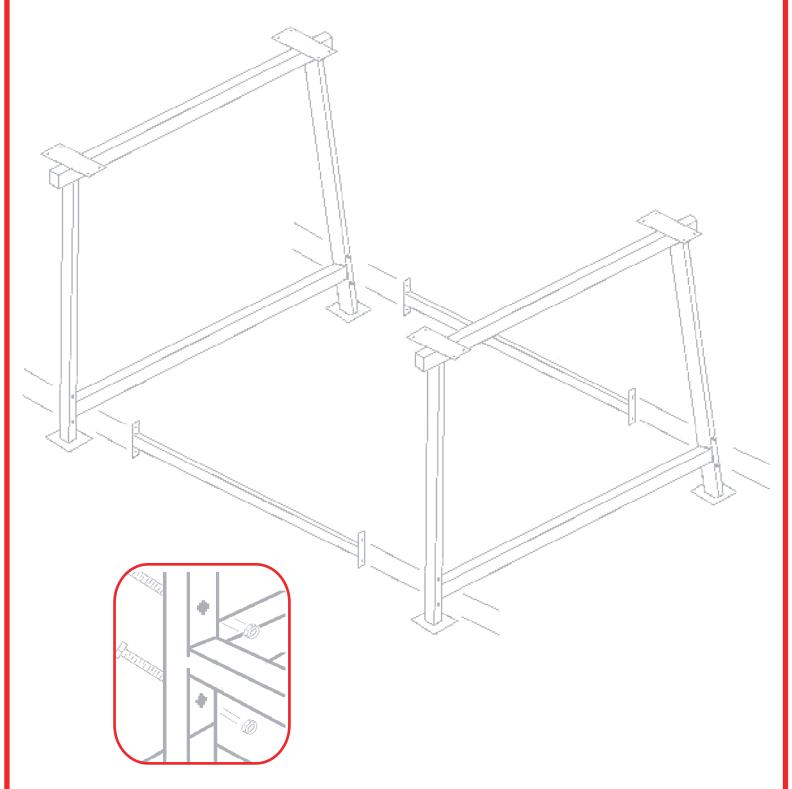

Fasten the two inch (2'') cross-members to the seven foot (7') main frames using eight (8) half inch by three and a half inch  $(1/2'' \times 3-1/2'')$  bolts, nuts, and locks.



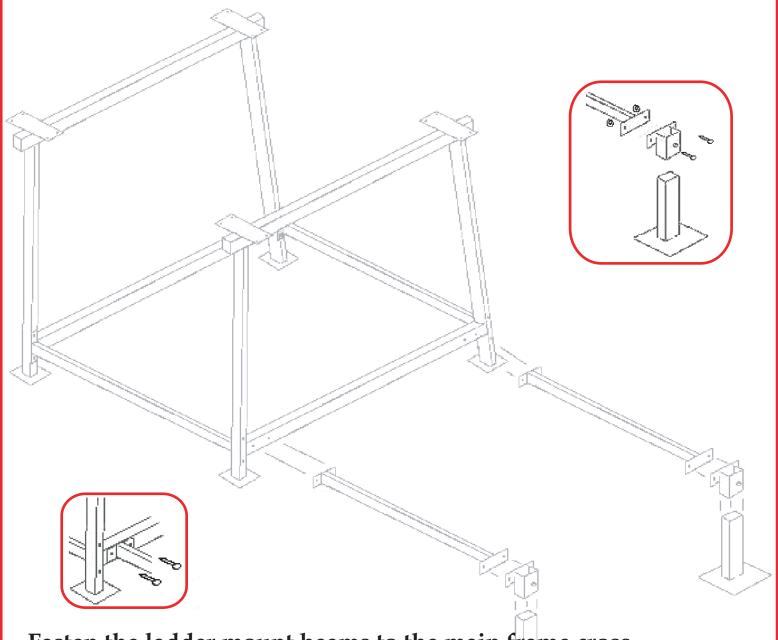


Fasten the ladder mount beams to the main frame cross beam using four (4) half inch by three and a half inch  $(1/2'' \times 3-1/2'')$  bolts, nuts and locks.

Fasten the stabilizer leg mounts to the ladder mount beams using half inch by one and a half inch  $(1/2" \times 1-1/2")$  bolts, nuts and locks.

Insert the stabilizer legs into the stabilizer leg mounts and level.




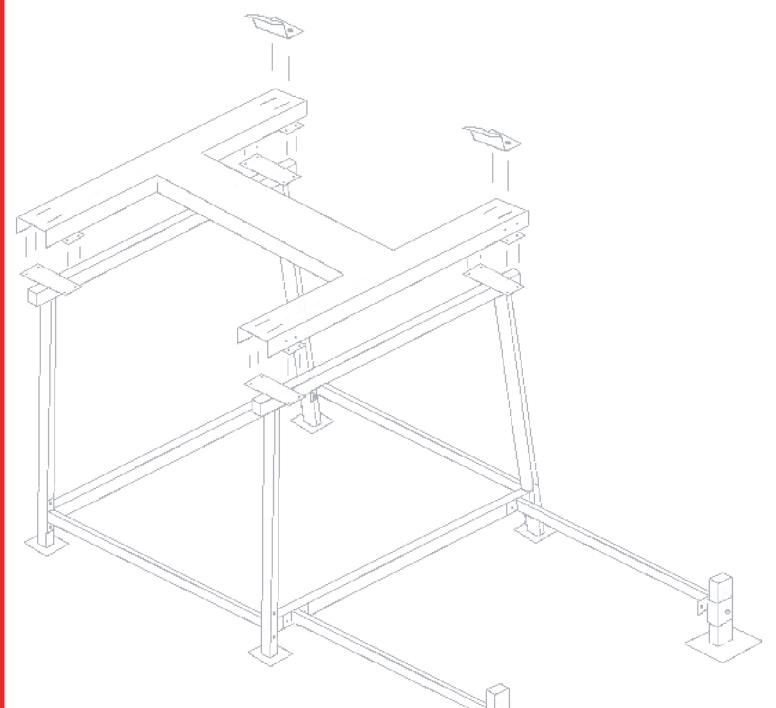

Mount the channel base frame to the main structure using sixteen (16) half inch by one and a half inch  $(1/2" \times 1-1/2")$  bolts, nuts and locks.


Fasten two (2) of the tub hold down clamps to the channel base frame using four (4) half inch by one and a half inch  $(1/2" \times 1-1/2")$  bolts, nuts and locks.



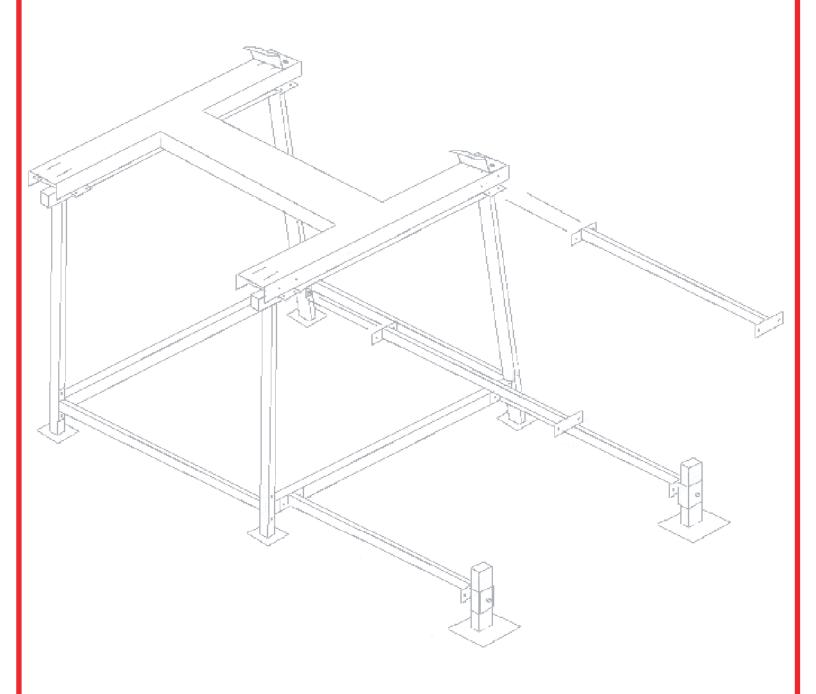


Fasten the intermediate ladder beams to the channel frame using four (4) half inch by one and a half inch  $(1/2" \times 1-1/2")$  bolts, nuts and locks.



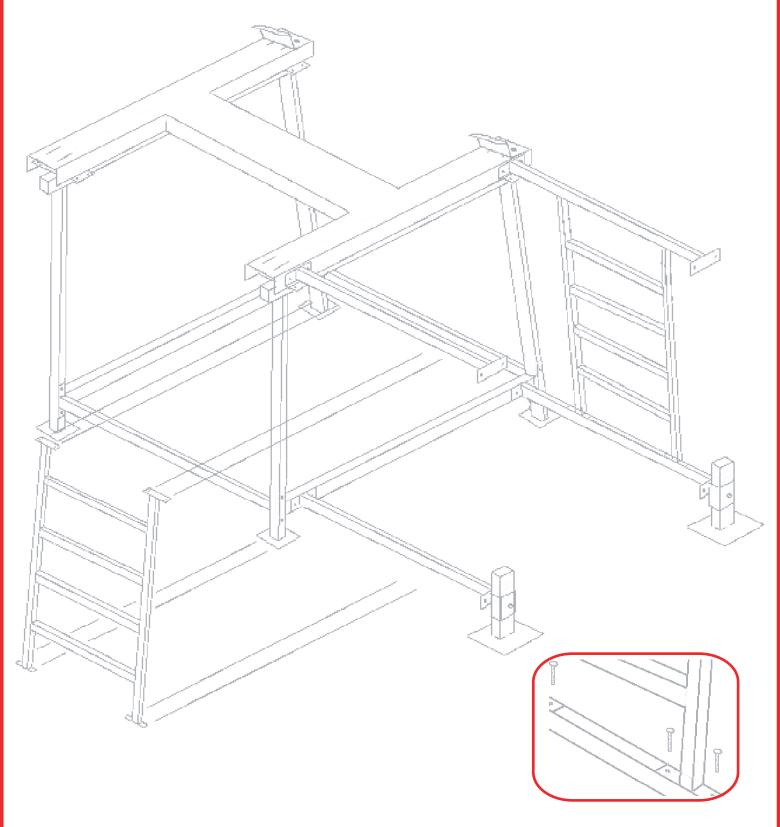


Fasten the bottom of the lower ladder sections to the ladder mount beams using eight (8) three-eights of an inch by two and a half inch  $(3/8" \times 2-1/2")$  bolts, nuts and locks.



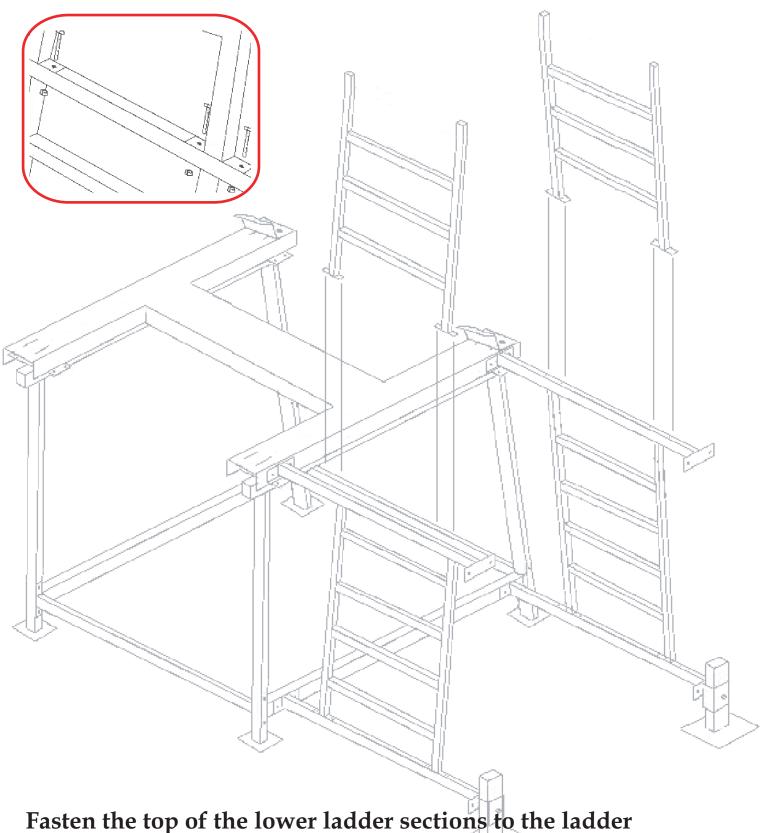

Fasten the top of the lower ladder sections to the ladder mount beams and upper ladder sections using eight (8) three-eights of an inch by three inch (3/8" x 3") bolts, nuts and locks.



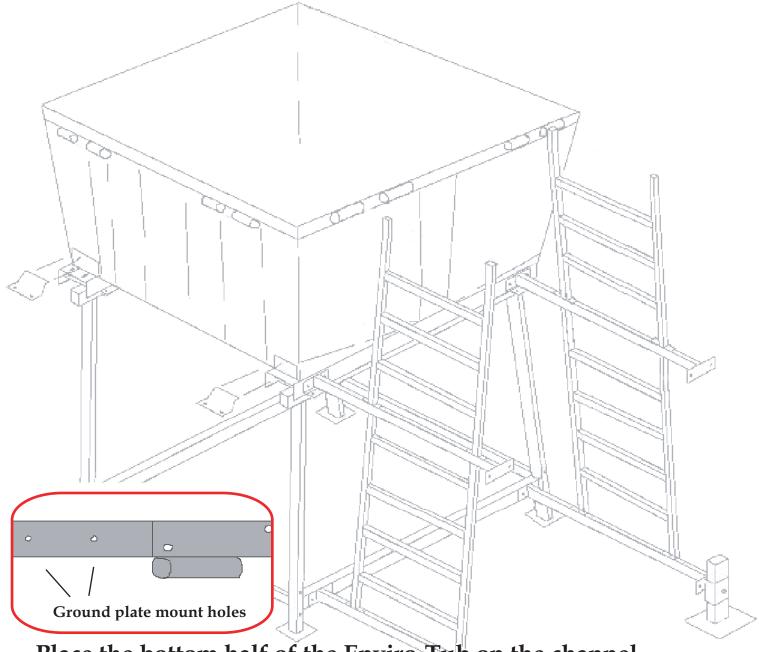

Place the bottom half of the Enviro-Tub on the channel frame.

Insert the other two tub hold down clamps using four (4) half inch by one and a half inch  $(1/2" \times 1-1/2")$  bolts, nuts and locks.


Tighten all eight (8) tub hold clamps to secure the bottom.



Insert the plate form hinge pins to secure platform to the Enviro-Tub. Making sure to insert the safety pins.

Attach front of the platform to the upper ladders using four (4) three-eights inch by two inch  $(3/8" \times 2")$  bolts, nuts and locks.



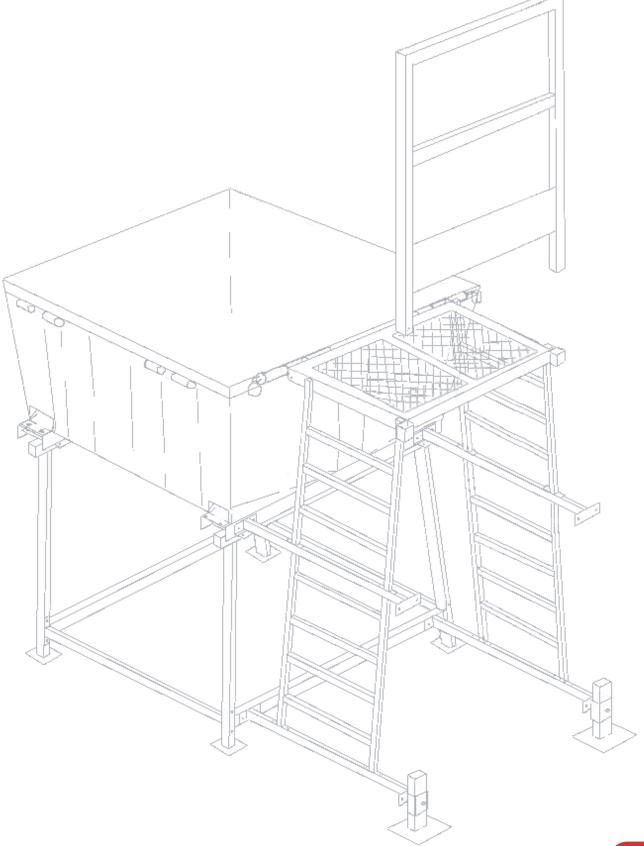


Insert the handrail into the platform handrail mount pockets and secure using two (2) safety pins.



Connect the upper tub section to the lower tub section using two (2) hinge pins.

Make sure to insert the safety pins after securing the tub top.



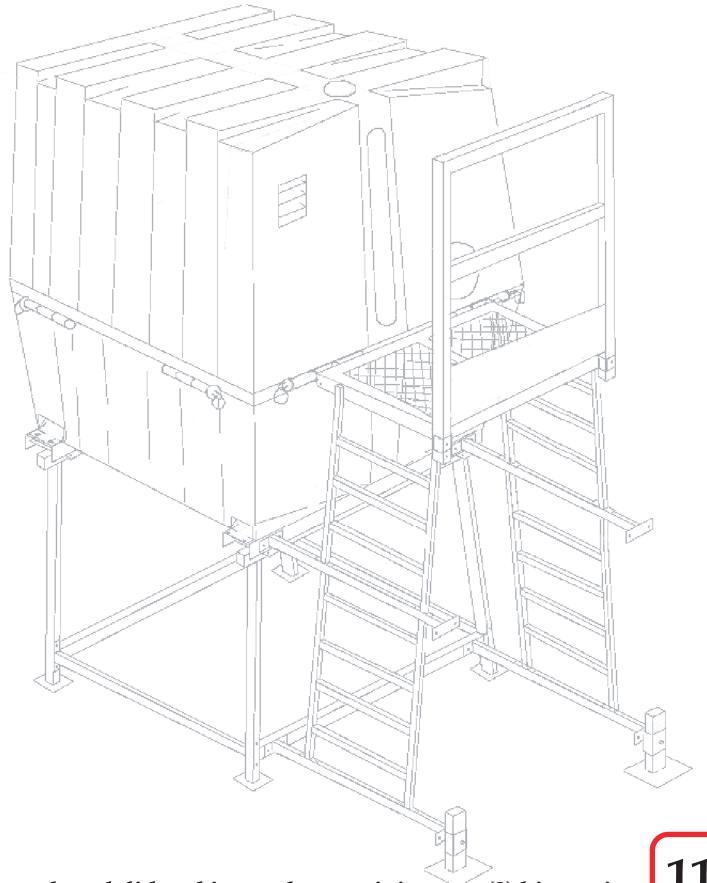

Close the tub lid and insert the remaining two (2) hinge pins.